

Dane aktualne na dzień: 07-10-2026 22:18

Link do produktu: <https://biuroparts.pl/rolka-guma-separujaca-do-kserokopiarek-toshiba-e-studio-2540c-256-25s-280-281c-282-283-283p-3040c-306-350-3500c-3510c-3511-p-2116.html>



## ROLKA (GUMA) SEPARUJĄCA DO KSEROKOPIAREK TOSHIBA E STUDIO 2540C / 256 / 25S / 280 / 281C / 282 / 283 / 283P / 3040C / 306 / 350 / 3500C / 3510C / 3511

|                  |                                    |
|------------------|------------------------------------|
| Cena brutto      | <b>8,60 zł</b>                     |
| Cena netto       | <b>6,99 zł</b>                     |
| Numer katalogowy | <b>DRUKPARTS-4856</b>              |
| Kod EAN          | <b>4401964280 ,<br/>4401964290</b> |

### Opis produktu

**ROLKA (GUMA) SEPARUJĄCA DO KSEROKOPIAREK TOSHIBA E STUDIO 2540C / 256 / 25S / 280 / 281C / 282 / 283 / 283P / 3040C / 306 / 350 / 3500C / 3510C / 3511 / 351C / 352 / 353 .. - 4401964280 , 4401964290**

### Pasuję do:

**Toshiba 2060**

**Toshiba 2860**

**Toshiba 3560**

**Toshiba 4560**

**Toshiba DP1600**

**Toshiba DP2000**

**Toshiba DP2460**

**Toshiba DP2500**

**Toshiba DP2570**

**Toshiba DP3580**

**Toshiba E STUDIO 16**

---

**Toshiba E STUDIO 160**

**Toshiba E STUDIO 16S**

**Toshiba E STUDIO 20**

**Toshiba E STUDIO 200**

**Toshiba E STUDIO 200L**

**Toshiba E STUDIO 202L**

**Toshiba E STUDIO 203L**

**Toshiba E STUDIO 2040C**

**Toshiba E STUDIO 206L**

**Toshiba E STUDIO 20S**

**Toshiba E STUDIO 230**

**Toshiba E STUDIO 232**

**Toshiba E STUDIO 233**

**Toshiba E STUDIO 233P**

**Toshiba E STUDIO 25**

**Toshiba E STUDIO 250**

**Toshiba E STUDIO 2500C**

**Toshiba E STUDIO 2540C**

**Toshiba E STUDIO 256**

**Toshiba E STUDIO 25S**

**Toshiba E STUDIO 280**

**Toshiba E STUDIO 281C**

**Toshiba E STUDIO 282**

**Toshiba E STUDIO 283**

**Toshiba E STUDIO 283P**

**Toshiba E STUDIO 3040C**

**Toshiba E STUDIO 306**

**Toshiba E STUDIO 350**

**Toshiba E STUDIO 3500C**

**Toshiba E STUDIO 3510C**

**Toshiba E STUDIO 3511**

**Toshiba E STUDIO 351C**

**Toshiba E STUDIO 352**

**Toshiba E STUDIO 353**

**Toshiba E STUDIO 3540C**

---

**Toshiba E STUDIO 356**

**Toshiba E STUDIO 450**

**Toshiba E STUDIO 4511**

**Toshiba E STUDIO 451C**

**Toshiba E STUDIO 452**

**Toshiba E STUDIO 453**

**Toshiba E STUDIO 4540C**

**Toshiba E STUDIO 456**

**Toshiba KD1011**

**Toshiba KD1013**

**Toshiba KD1018**

**Toshiba MD1009**

**Toshiba MD5006**

**Toshiba MP1501**

**Toshiba MY1015**

**Toshiba MY1028**

**Toshiba MY1031**

**Imagistics CM3530**

**Imagistics CM4530**

**Lanier 7228**

**Lanier 7320**

**Lanier 7328**

**Lanier 7335**

**Lanier 7345**

**Lanier LCC28**

**Oce IM2330**

**Oce IM2830**

**Oce IM3530**

**Oce IM4530**

**Okidata CX1145MFP**

**Xerox Workcentre Pro 416**

**Xerox Workcentre Pro 416DC**

**Xerox Workcentre Pro 416DE**

**Xerox Workcentre Pro 416E**

**Xerox Workcentre Pro 416P**

---

**Xerox Workcentre Pro 416PI**

**Xerox Workcentre Pro 416S**

**Xerox Workcentre Pro 416SI**

**Xerox Workcentre Pro 421DEI**

**Xerox Workcentre Pro 421Pi**